

150 CFM WHISPER VAC

ASSEMBLY OPERATION

Unlatch barrel ring from upper and lower barrels.

Lift upper barrel from lower barrel and carefully set it on the floor.

Remove 2-1/2" dia. vacuum hose from lower barrel.

Place upper barrel onto lower barrel and attach with barrel ring.

Connect 2-1/2" dia. vacuum hose to both dust collector and blast cabinet. Note: Hose end with plastic adapter fitting, fits into inlet flange in dust collector. For connecting other end of hose to cabinet, see blast cabinet manual for location of exhaust port.

MAINTENANCE

Check vacuum hoses for cracks or wear spots - replace if worn.

Check electrical cord for cuts or fraying - replace if worn.

If dust collector fails to clear dust from cabinet - check filter bag for excessive debris build-up - clean or replace.

If dust blows into shop air through motor head assembly - check filter bag for holes - replace.

Empty the residue dust from dust collector can by unlatching barrel ring - removing upper barrel and dumping dust from bottom barrel. It is best not to let more than a gallon of debris remain in dust collector before discarding.

FILTER BAG REPLACEMENT

Unlatch barrel ring from upper and lower barrels.

Lift up rubber bag holder - slide bag off upper barrel.

Dispose of old filter bag properly.






Slide new bag on upper barrel and secure with rubber bag holder.

Set upper barrel back on lower barrel and secure in place with barrel ring.

Econoline Abrasive Products
401 N. Griffin
Grand Haven, MI 49417
1-800-253-9968
Fax 616-846-6341

www.sandblasting.com

DRW 1
150 CFM
WHISPER VAC

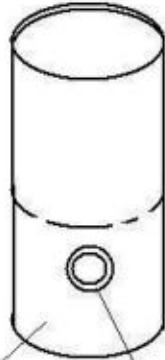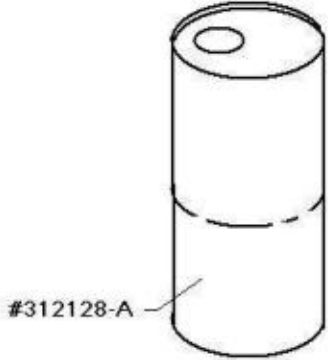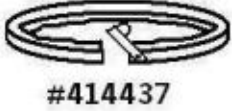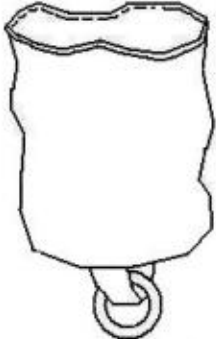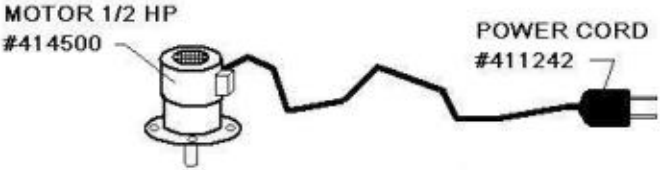

#411430

Notes: Ployfelt filter bag - 50 Micron